REVISIONS		
LTR	ECN	DATE
K	40036	06/04/08

NOTE:
1. ALL PARTS SHOULD BE INSPECTED AND CAREFULLY CLEANED TO REMOVE ALL DIRT AND FOREIGN MATTER.
2. APPLY LUBRICANT (500) TO ALL COMPONENTS BEFORE ASSEMBLY.
3. INSPECT PER ES-6.
4. CYLINDER ADAPTER (4-15) NOT REQUIRED ON ALL MODELS
5. FULLY RETRACT M3 JACKSCREW (6-30) TO INSURE SPRING (4-70) IS IN FULL SPRING RETURN POSITION BEFORE DISASSEMBLY.
6. LOCATE SPRING TAG (4-60) ON CENTERLINE OF CYLINDER (4-10) ADJACENT TO ACCESSORY MOUNTING PADS ON TOP OF HOUSING.

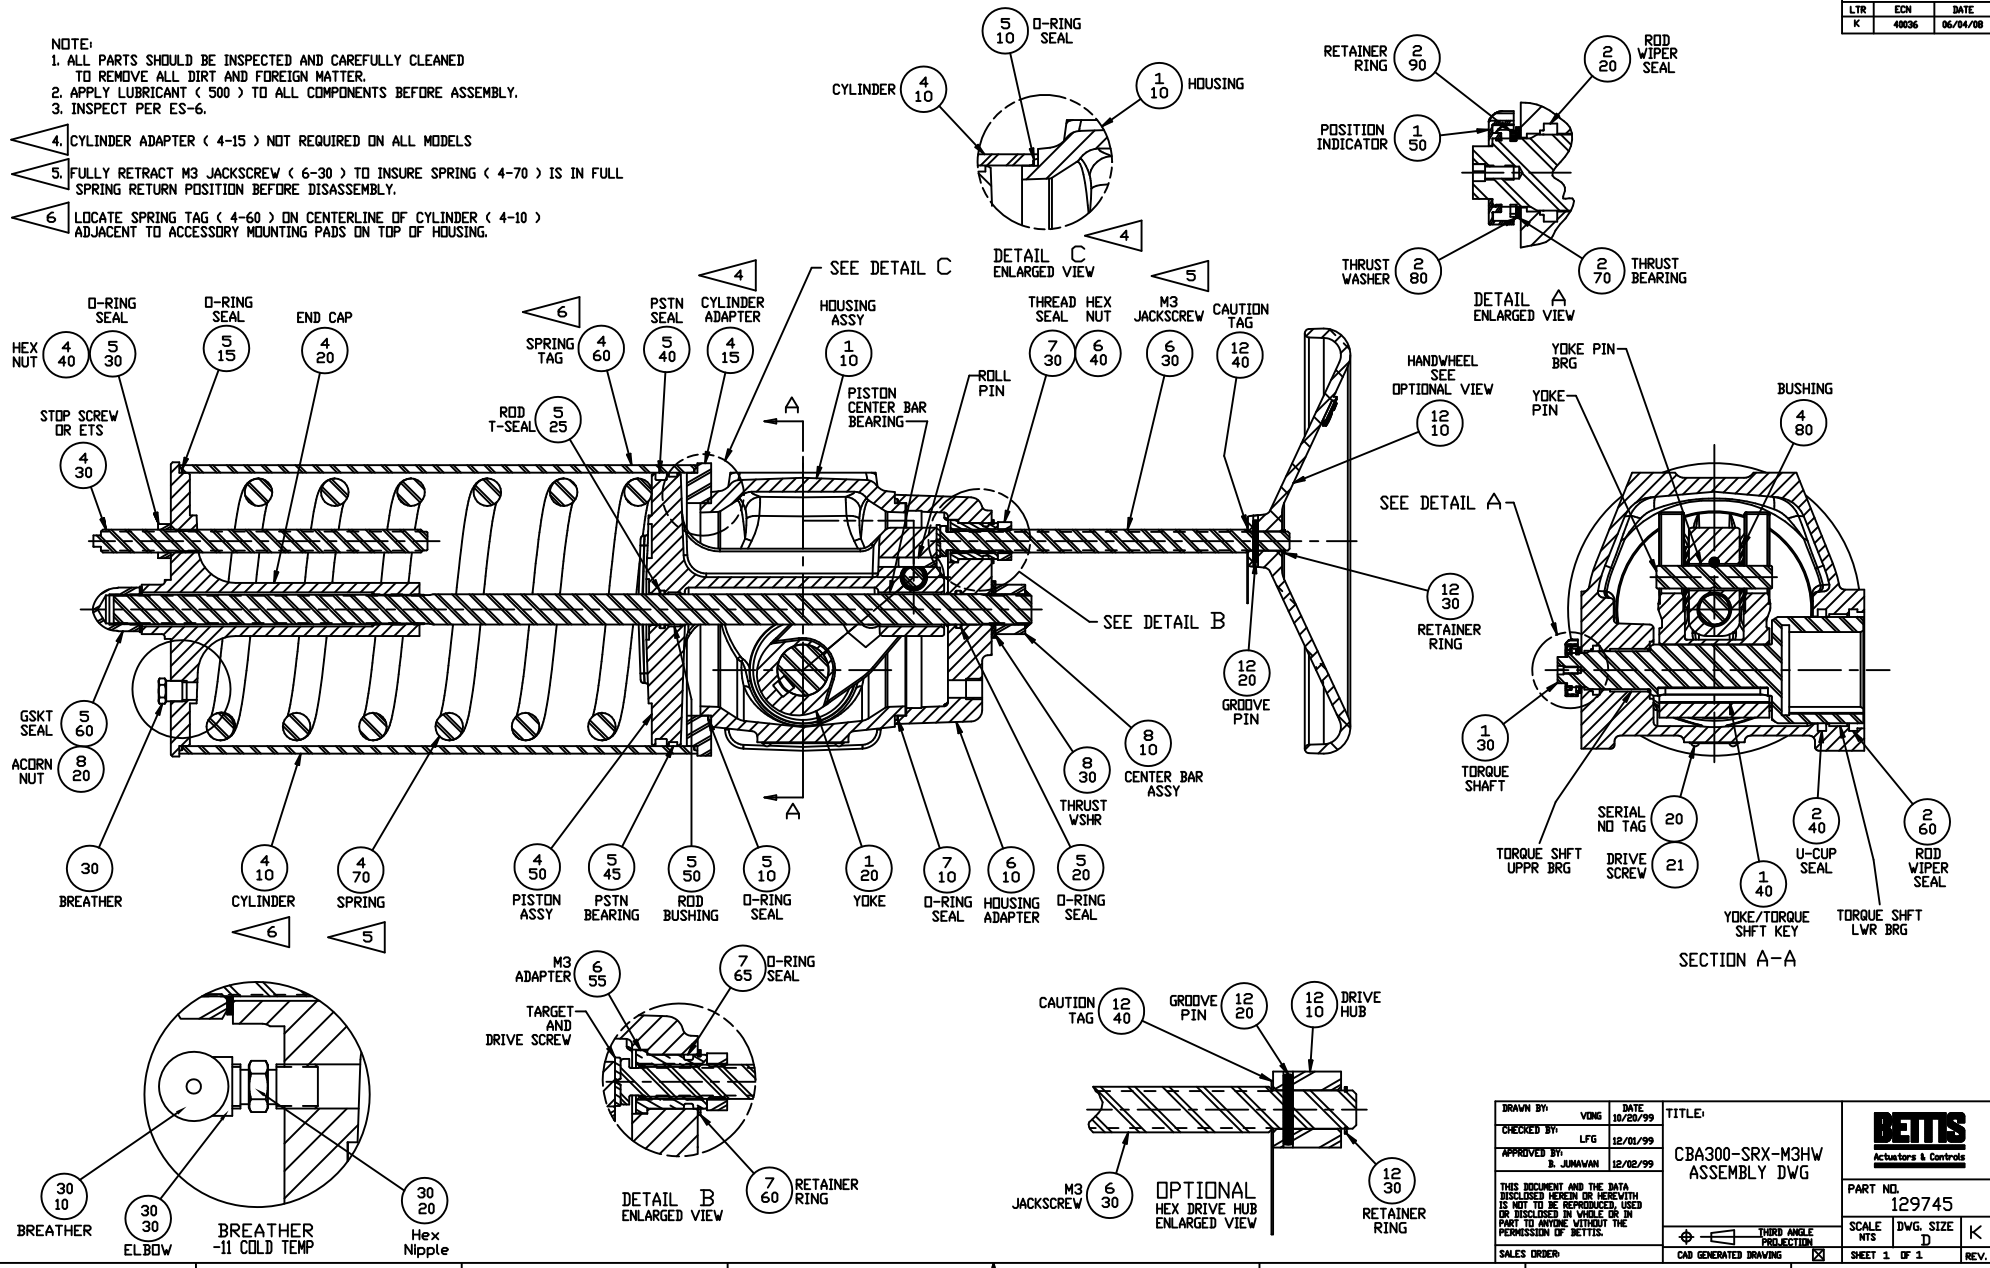

DRAWN BY: VONG	DATE 10/20/99	TITLE: CBA300-SRX-M3HW ASSEMBLY DWG
CHECKED BY: LFG	12/01/99	
APPROVED BY: B. JUMAWAN	12/02/99	
THIS DOCUMENT AND THE DATA DISCLOSED HEREIN OR HEREWITH IS NOT TO BE REPRODUCED, USED OR DISCLOSED IN WHOLE OR IN PART TO ANYONE WITHOUT THE PERMISSION OF BETTIS.		THIRD ANGLE PROJECTION
SALES ORDER:		CAD GENERATED DRAWING ☒

BETTIS Actuators & Controls

PART NO. 129745

SCALE NTS | DWG. SIZE D | K

SHEET 1 OF 1 | REV.